


HOW TO MEASURE HUB TO GUARD (H.T.G)

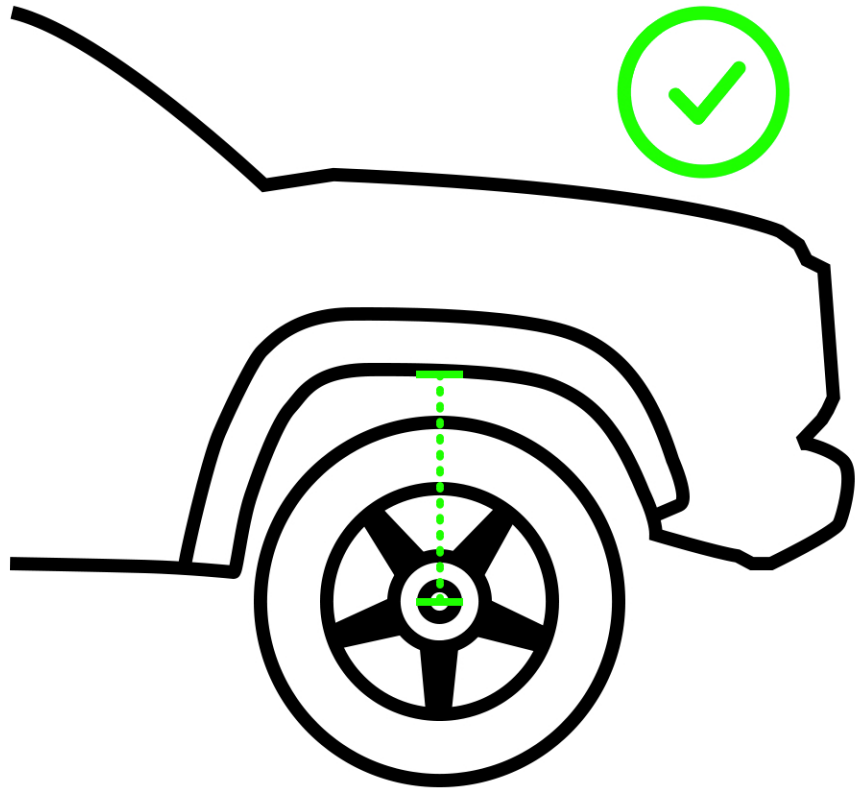

1. Make sure the vehicle is on a flat level surface.
2. Make sure the full weight of the vehicle is on the suspension.
3. Pull a measurement from the center of the wheel hub to the edge of the fender. (be sure to keep the tape measure as straight as possible for the most accurate measurement)



WHY FLOOR TO FENDER MEASUREMENTS ARE NOT ACCURATE

1. Tire size can affect measurement, even tires with the same size but different brand can vary in actual size
2. Tire PSI can throw off measurements
3. Tire Wear can throw off measurements

