



Are one or more of your adjusters, stiff or stuck? Use the following guide to clean and free up your adjusters.

1. Using a 2mm allen key, remove the top bolt on the black knob. The purple knob uses 3 grub screws, loosen and remove the purple knob.



2. Wipe the reservoir and the piston head clean, using a 15mm wrench or adjustable wrench turn the piston head back and forth until the clics are clearly audible and the adjuster is moving freely.



3. Re-install the knobs and apply medium grade thread locker onto the screws.

