

How to measure strut seat height on IMS / MRR Struts



1. Seat height is measured from the center of the lower bushing eye to the bottom of the coil seat, where the coil ends (see diagram below). The measurement must be recorded in either centimeters (cm) or millimeters (mm).

