


MRA59-A711 Installation Instructions

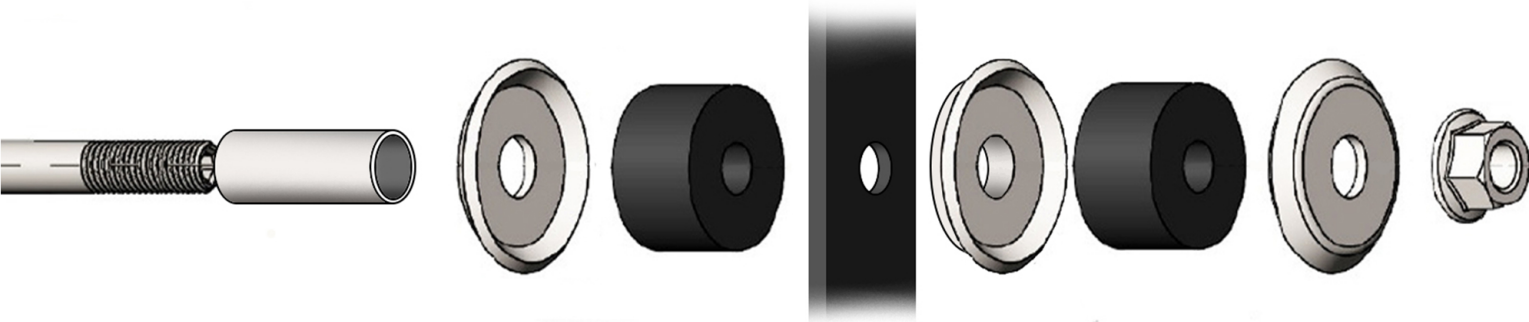

Place the flat washer with the larger opening adjacent to the shock body, followed by the installation of the bushing with both flat sides and the inner sleeve. Position the cone washer above the chassis, accompanying it with the cone bushing. Finally, affix the flat washer with the smaller opening on the uppermost part and secure it in place with the nut. Ensure thorough tightening until reaching the point of bottoming out.



Chassis

Use the OEM hole on the chassis behind the bump stop pad, Install with provided hardware

