

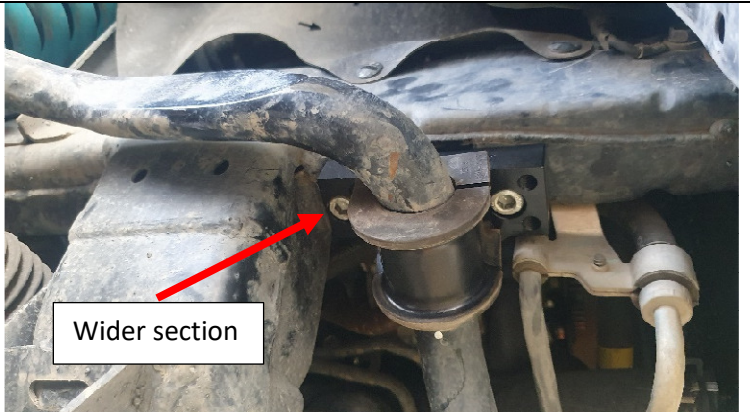

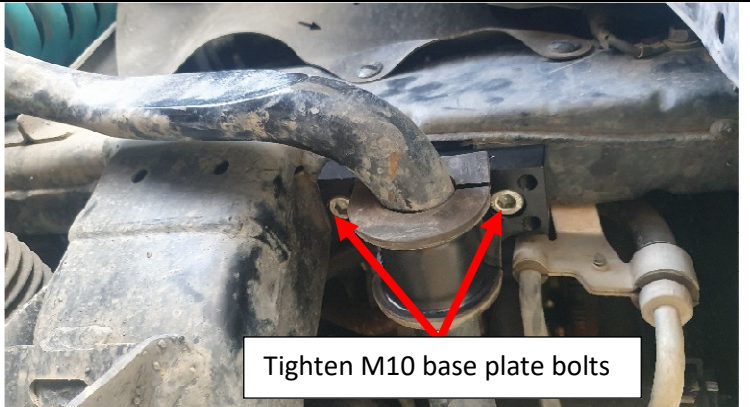


Dobinsons Spring and Suspension
www.dobinsons.com
 58 Hollingsworth Street
 Kawana QUEENSLAND AUSTRALIA 4701

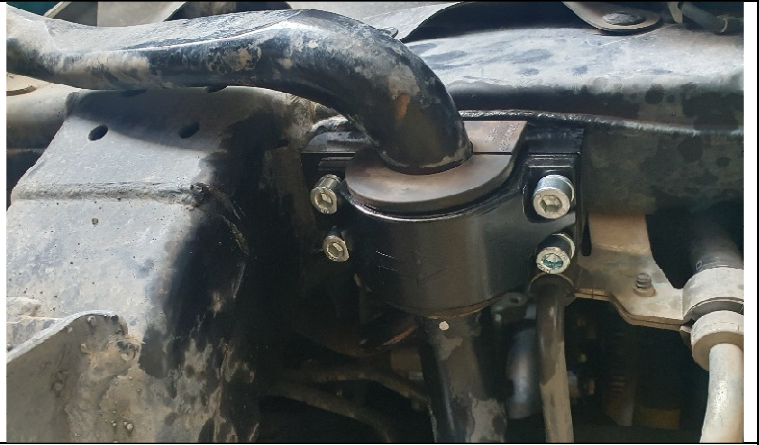
FITTING INSTRUCTIONS PART NUMBER – SE59-635K

Toyota Prado 150
 Toyota FJ Cruiser
 Toyota 4 Runner 4th gen

NOTE – Installation is always recommended by a competent technician. Height not to be adjusted on vehicle.

<p>1. Remove the OEM bash plate under the sway bar and remove the OEM Sway Bar D-Bracket Bolts and bracket</p>	
<p>2. Install the new bracket base plate using the M10 x 1.25 x 30mm cap head bolts supplied (no washers on these bolts)– note the orientation – the wider section of the base plate is to the rear of the vehicle so the swaybar is moved forward. For now leave this a little loose so you are able to move it around and align the D bracket to the base plate later.</p>	 <p>Wider section</p>
<p>3. Apply a small amount of Wd40/soapy water or equivalent to the sway bar rubber and base bracket to make it easier to align.</p>	
<p>4. Slide the new D-Bracket over the swaybar D rubber wit the arrow pointing forward and align it the base plate so that each of the M8 x 1.25 bolts align. Use a jack under the centre of the swaybar to gently raise the swaybar into place.</p>	 <p>Lubricate to help install. Install bolts loosely to align</p>
<p>5. Carefully remove the D-bracket installed in step 4 and tighten the M10 bolts in the base plate installed in step 2.</p>	 <p>Tighten M10 base plate bolts</p>

6. Re-Install the D bracket with M8 x 1.25 bolts with spring washer and flat washer to Base plate and tighten.



7. Re-install the bash plate.